



BELOW DECK MOUNT ASSEMBLY INSTRUCTIONS

PACKED BY: _____ DATE: _____
CHECKED BY: _____ DATE: _____

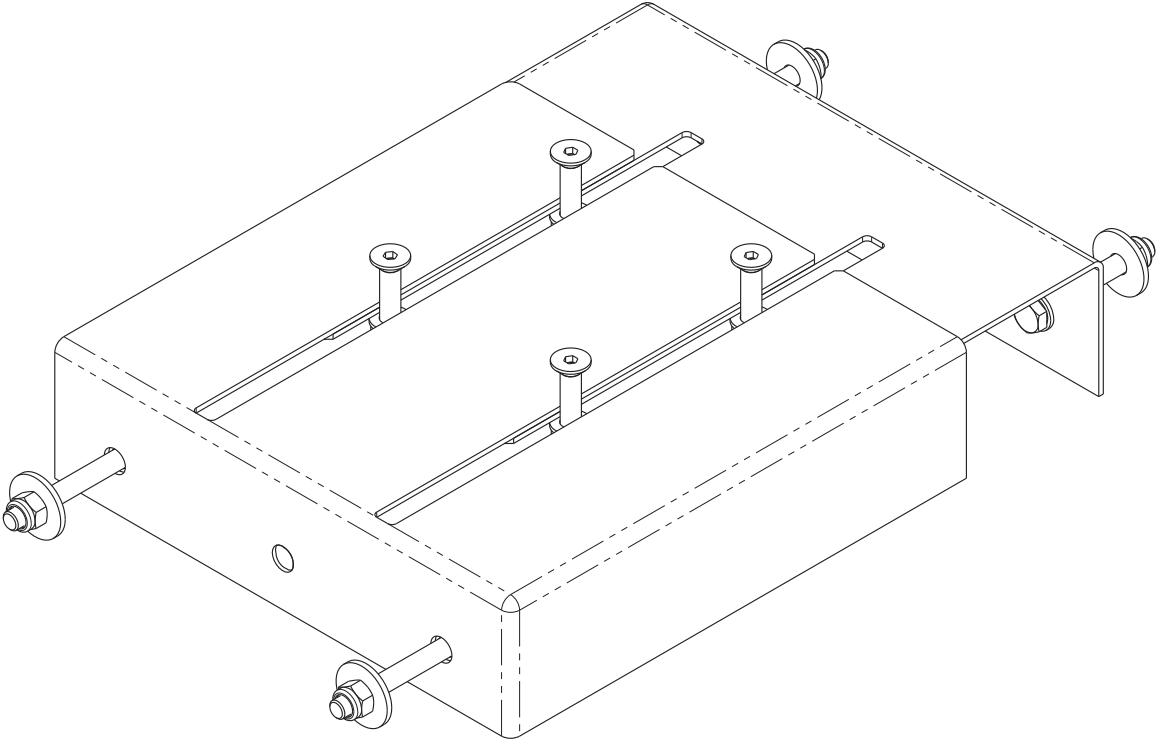


PARTS LIST

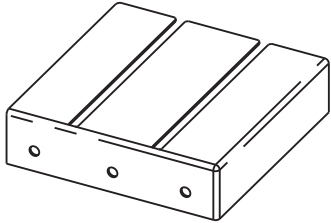


1 x DECK PLATE TOP

PACKED

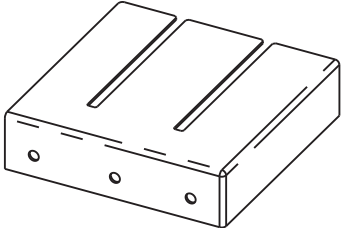


1 x DECK PLATE BOTTOM

PACKED

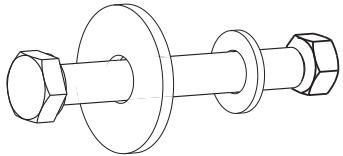


4 X M10 DOME NUT
4 x M10 X 20 WASHER
4 x M10 x 30 X 3 WASHER
4 x M10 x 75 BOLT

PACKED

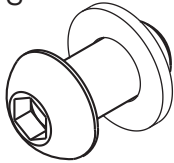


4 x M10 x 20 X 4 BUTTON HEAD BOLTS

PACKED

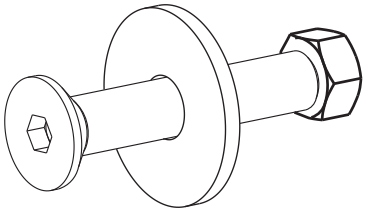

4 X M10 DOME NUT
4 X M10 X 30 X 3 WASHER
4 X M10 x 55 CSK BOLT


PACKED

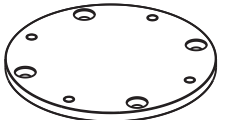


1 x BASE PLATE

PACKED


TUBE ATTACHMENTS




Centre Pole Tube
4 x M10 x 20
button head screws




Rope Lock Stand
4 x M10 x 20
button head screws

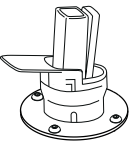

Pavone Spigot
4 x M10 x 20
button head screws




Picollo Spigot
4 x M10 x 20
button head screws




Pendulum Spigot
4 x M10 x 20
button head screws

woodline

shade solutions

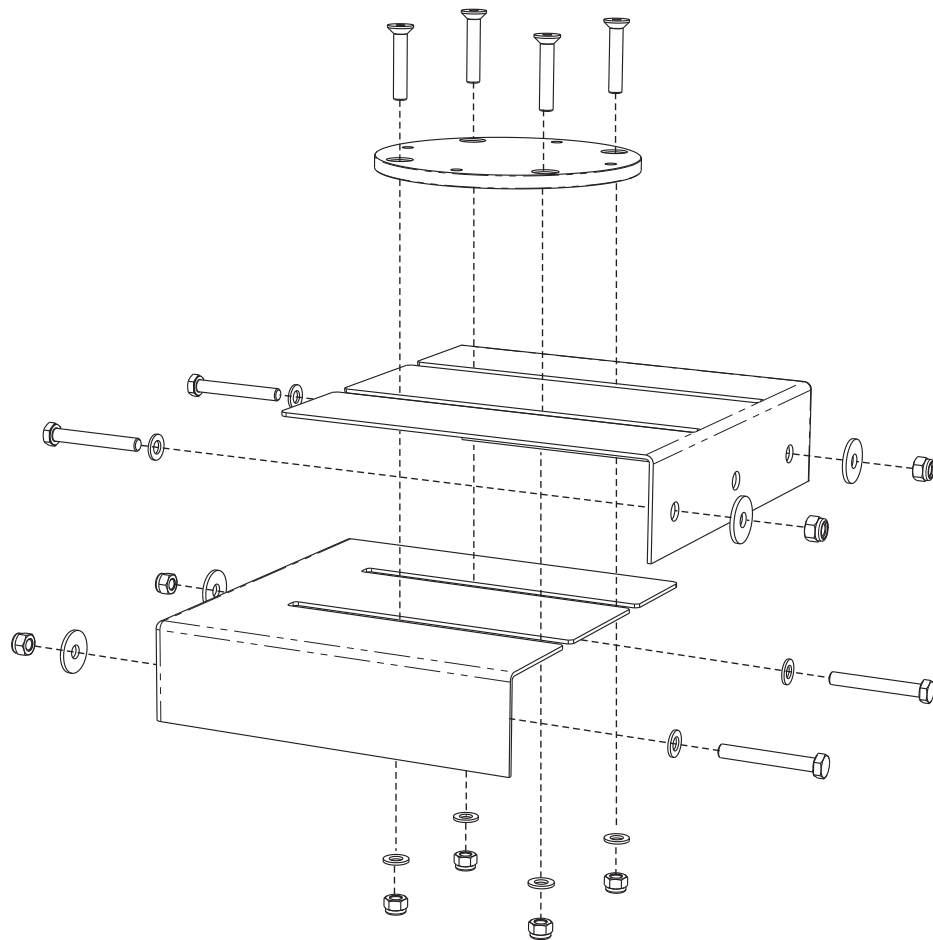


STEP 1

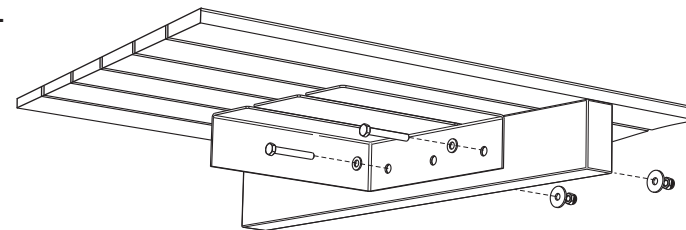


POSITION TOP DECK PLATE BRACKET AT DESIRED LOCATION AGAINST DECK BEAM AND BOTTOM OF DECK FLOOR. USE G-CLAMPS TO HOLD PLATE IN POSITION. MARK WHERE TO DRILL HOLES AND THEN FASTEN M10 X 75 BOLTS AS ILLUSTRATED.

STEP 2

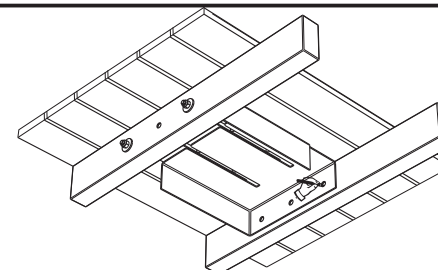


AFTER TOP DECK BRACKET IS PROPERLY FASTENED POSITION BOTTOM DECK BRACKET SO THAT IT IS FLUSH WITH TOP BRACKET AND THAT SLOTS OF BOTH BRACKETS ARE ALIGNED. USE G - CLAMPS TO HOLD PLATE IN POSITION. MARK HOLES AS ILLUSTRATED.

STEP 3

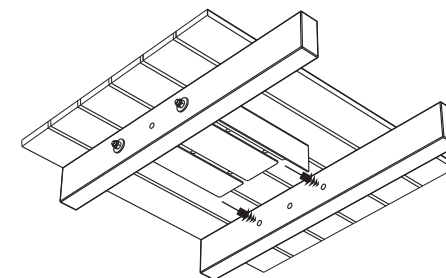

REMOVE G-CLAMPS AND BRACKETS BEFORE DRILLING DRILL. MARKED AREAS WITH M10 DRILL.



STEP 4

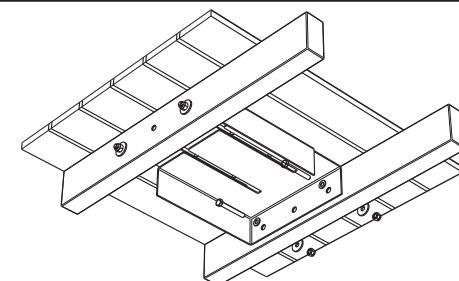


INSERT M10 X 75 BOLTS WITH SMALL WASHER ON BRACKET SIDE AND BIG WASHER ON OPPOSITE SIDE OF BEAM AS ILLUSTRATED. ENSURE THE BOLTS ARE PROPERLY SECURED.

woodline

shade solutions

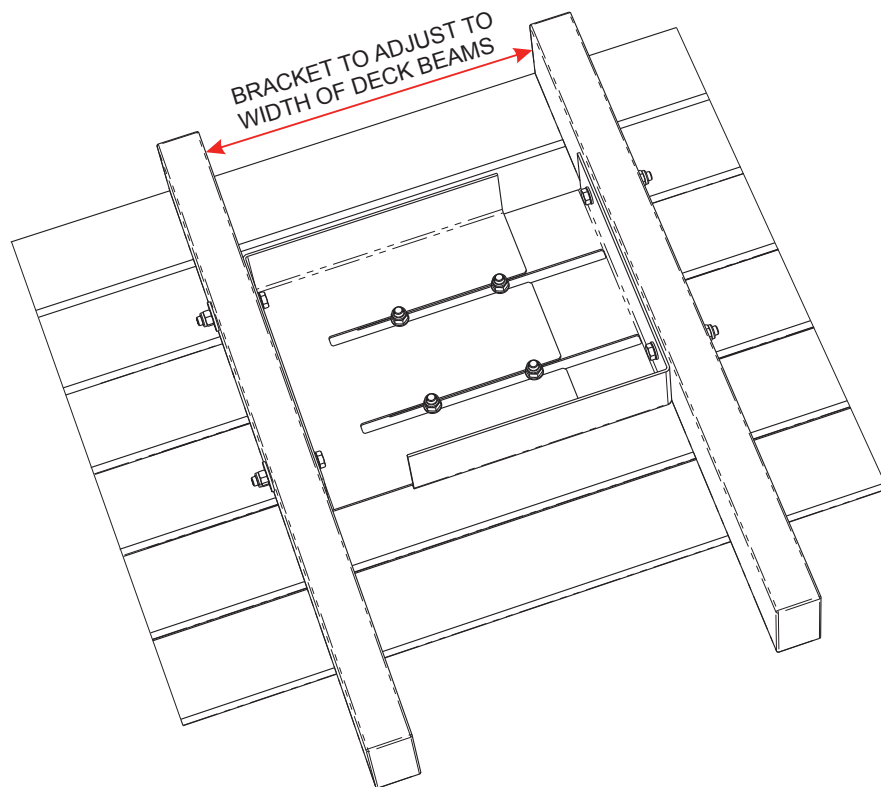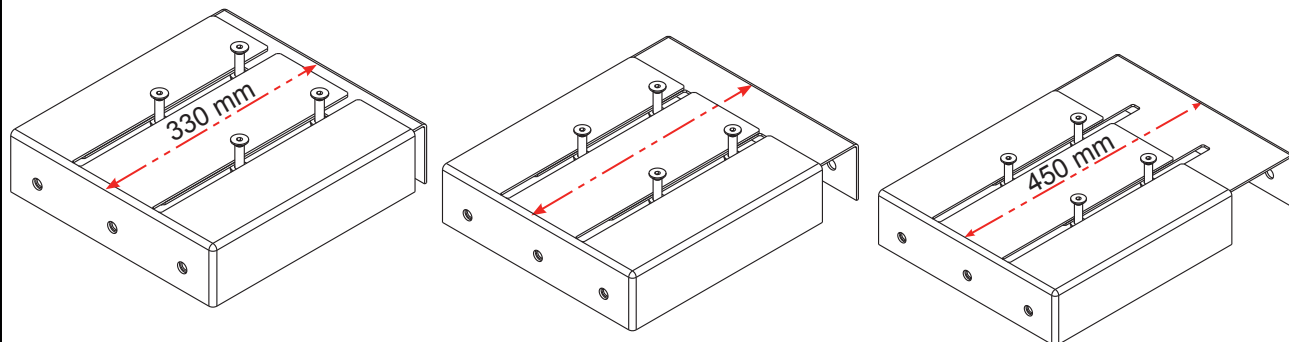


STEP 5

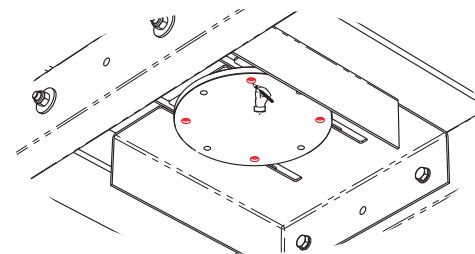


BASE PLATE CAN BE USED TO MARK DRILL HOLE POSITIONS FROM BELOW OR FROM ABOVE (CAN BE DONE FROM ABOVE IF THE SLOT DIRECTIONS ARE VISIBLE AND THE HOLES CAN BE CENTERED ABOVE THE SLOTS.)

STEP 6

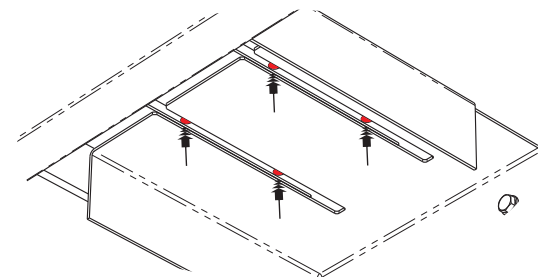

DRILL HOLES WITH M10 DRILL BIT WHERE MARKED AS ILLUSTRATED ON SKETCH.

STEP 7

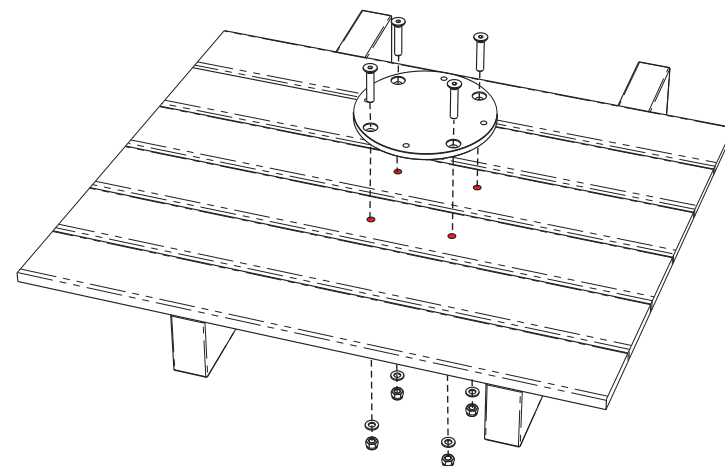


INSERT M10 COUNTER SUNK BOLTS THROUGH BASE PLATE AND HOLES ON DECK FLOOR. THEN FASTEN BASE PLATE TO UNIVERSAL BRACKET AND TOP OF DECK FLOOR AS ILLUSTRATED.


woodline

shade solutions


www.woodlineshade.com | +1 848 266 0800

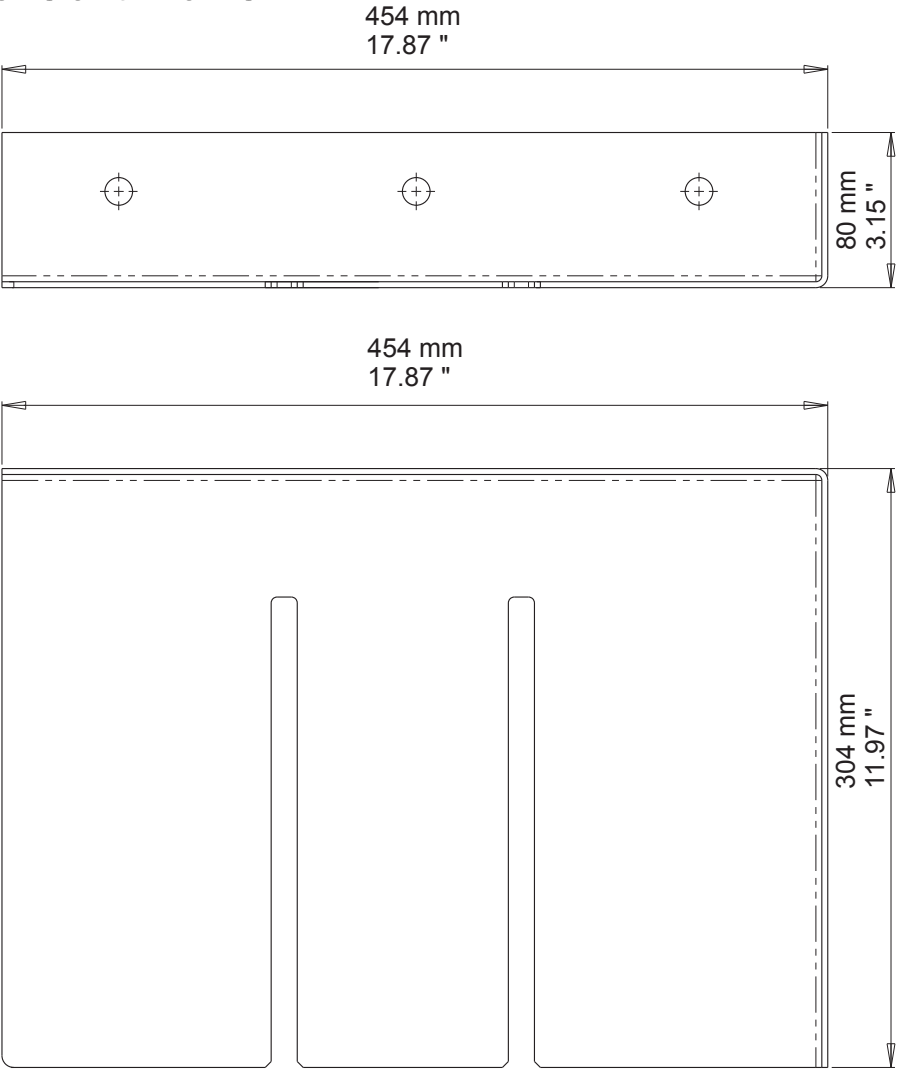

TUBE ATTACHMENTS

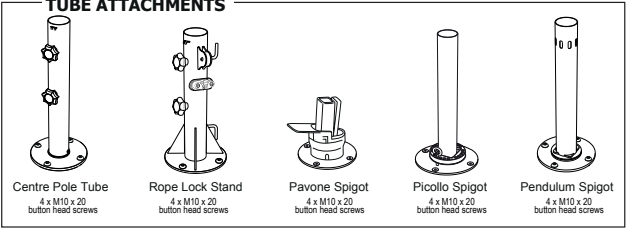

STEP 8

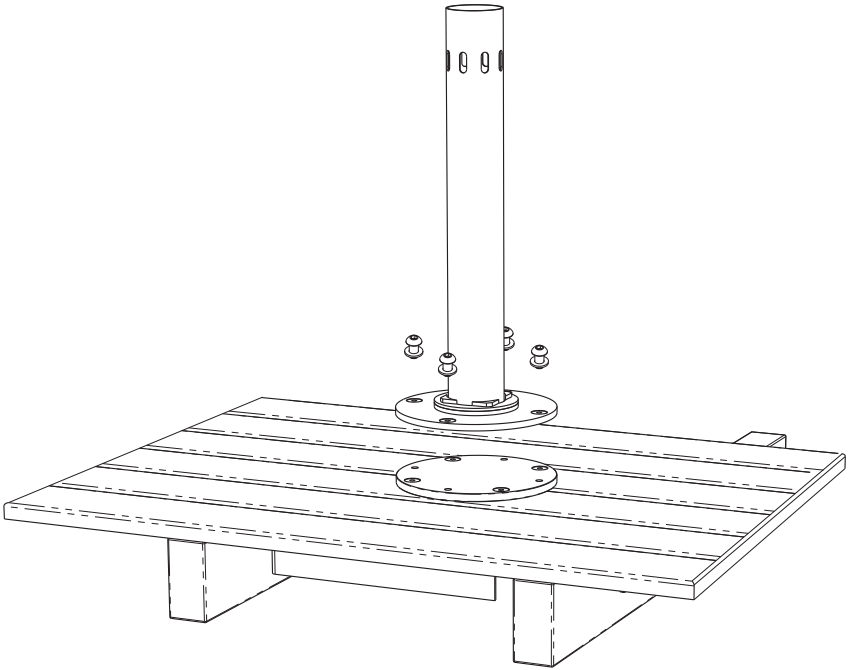

USE THE 4 COUNTER SUNK BOLTS AND ALLEN KEY TO TIGHTEN THE BASE PLATE & SPIGOT TOGETHER. ENSURE THE BOLTS ARE PROPERLY SECURED.